INSTRUCTIONS

KENDAL LIGHTING INC.

PF40-3LPE-CH

Safety Instructions

- CAUTION: All electrical connections should be done by a qualified electrician.

- Follow and save these instructions.
- Always disconnect power at circuit breaker or unplug from wall outlet before servicing.

Warning: Replace with lamps suitable for use in open fixture.

Unpack your fixture, you should have the following items:

A.Mounting plate

B.Canopy

C.G9 50W bulb 3PCS

D.Shade 1PCS

Parts bag

1.Screws 2PCS

2.Wire nuts 3PCS

3.Tool 1PCS

4.plastic button 1PCS

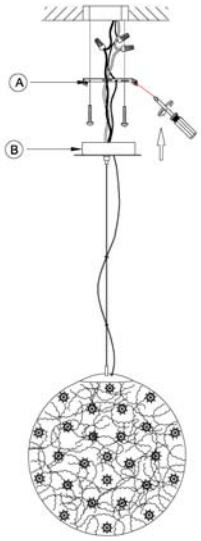

#1

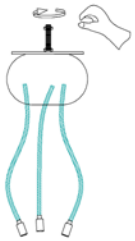

Remove the nut from the threaded nipple

#2

Put the holder into the shade

#3



Install the top cap and tighten the nut.

#4

Put the wire through into the canopy, adjust the wire lenth by plastic wire buckle

#5

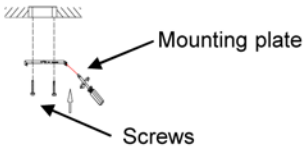

Attach the mounting plate to junction box with screws

#6

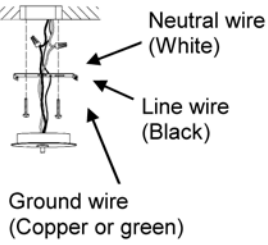

Connect the GROUND WIRE from junction box to GROUND (or GREEN) with from fixture by using a wire nut. (Or attach them to the mounting plate with a green ground screw)Connect the NEUTRAL WIRE from junction box to NEUTRAL (or WHITE) wire from fixture with a wire nut.Connect the LINE WIRE from junction box to LINE (or BLACK) wire from fixture with a wire nut.

#7



Attach the canopy to the mounting plate with screws provided.